



Owners Manual

Staple or Tape receipt
to this page.

DO NOT LOCK THIS IN YOUR SAFE

IMPORTANT: FILL OUT THE INFORMATION BELOW AND RETAIN FOR YOUR RECORDS.

IT WILL BE REQUIRED WHEN CALLING **TECHNICAL SUPPORT** AT:

Hours: Monday – Saturday 6am to 8pm PST

(800) 242-1055

SERIAL NUMBER

Combination

Key Number

(Electronic Lock ONLY)

Purchased at

(Dealer Name)

Date of Purchase

Safari Safe Co.

“Edition 5”


Getting Started for Mechanical Lock

**Locate the combo card and secure it!
Do not lock it in the safe!**

Think carefully about storing the combo card. We recommend you store a copy of the combo card in a bank deposit box. The combination will be held on file for 6 months, after which the combination is deleted from our records. Only the dealer can call and request a combination if lost or forgotten in the 6 month period.

How to open/operate a mechanical lock

Important: Turn dial slowly and evenly. Do not turn back to regain alignment if you rotate past number. If an error is made, re-dial entire combination. Do not count turns. Count how many times each number is aligned with the opening index (at the 12 o'clock position). Always view dial and ring straight on, not at an angle. It is the owners' responsibility to maintain the code; Cannon will maintain records for up to 6 months.

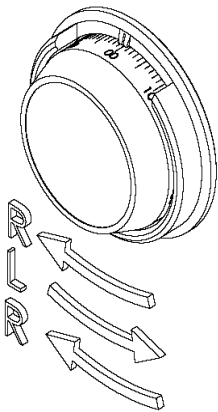

Step 1: Turn dial right, aligning first number with opening index the third time it comes to the index.

Step 2: Turn dial left, aligning second number with the opening index the second time it comes to the index.

Step 3: Turn dial right, aligning third number with the opening index the first time it comes to the index.

Step 5: Turn handle to the left or counter-clockwise to open safe.

Step 6: To relock and secure the combination lock, turn the dial to the left at least four revolutions.

Maintenance

Important: All maintenance work should be performed by a qualified locksmith in your area. Cannon assumes no responsibility for the cost of maintenance or the work performed. Per the manufacturer, mechanical locks should be lubricated and cleaned annually by a qualified locksmith.

Never attempt to lubricate or clean the dial or lock on your own.

Lexam Lock


(top row of number are 1,2,3 and A,B,C appear on the #1 key)

Multiple keypads are used. Verify you're using the correct instructions before attempting to programs!

**Remove the keys and secure them!
Do not lock them in the safe!**

Think carefully about storing the keys. If a key for the safe is on your key chain, an unauthorized person might gain access to it. We recommend you store a copy of the combo card in a bank deposit box.

**To order new keys an original receipt from the dealer where purchased is required.
No Exceptions!**

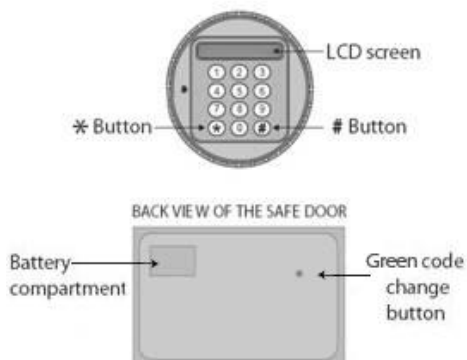

Opening for the First Time

- Locate the override keys that were in the envelope with the owner's manual.
- Insert the override key into the keyway and turn counter clockwise.
- Now turn the handle counter clockwise to open the safe.
- With the door open locate the battery compartment on the backside of the safe door and insert (4) AA batteries. **Factory preset access codes are either: 1-2-3-4-5-6 and 1-2-3-4-5-6-7-8.**

Getting Ready to Program

- Locate and remove the black plastic cover on the backside of the door panel in the upper right hand corner on the door panel. This will allow access to the 'Green Code Change Button'.
- There will be an audible beep with each key pressed.
- The lock requires the user to create two (2) access codes.
- **Important:** The safe door should be in the opened position with the bolts in the locked position

Choosing Your Own Access Code

- Keep your access code private.
- You can use a minimum of three (3) or a maximum of eight (8) numbers.
- If your access code is less than eight (8) entries, the '#' button needs to be pressed after the last number to open the safe.

Programming Your Access Code

Important: Before programming your access codes, write them down.

- Setting the first user access code.
 - Press the '#' button.
 - Press the 'Green Code Button' located on the backside of the safe door (right of battery compartment).
 - Type in your personal access code (minimum of three (3) or a maximum of eight (8) entries).
 - Press the '#' button. There will be a series of five (5) beeps and the LCD screen will show the word 'IN' confirming code was programmed.
- Setting the second user access code.
 - Press the 'Green Code Button' located on the backside of the safe door (right of battery compartment).
 - Type in your personal access code (minimum of three (3) or a maximum of eight (8) entries).
 - Press the '#' button. There will be a series of five (5) beeps and the LCD screen will show the word 'IN' confirming code was programmed.

Using the Key Access

Important: If your batteries have died or the safe has malfunctioned the key will override the lock and open the door. **To order new keys an original receipt from the dealer where purchased is required.**

- Remove the plastic cap that is left of the keypad.
- Insert the override key into the keyway and turn counter clockwise.
- Now turn the handle counter clockwise to open the safe.
- Replace the plastic cap to cover keyway.

Lock Out

When an invalid access code is entered three (3) times the lock will go into lock out for 3 minutes and you will be unable to access the safe.

SecuRam Lock

(top row of number are 1,2,3,4 and a 'SecuRam' logo on the faceplate)

Multiple keypads are used. Verify you're using the correct instructions before attempting to programs!

Opening the Safe

Important: The factory preset code is 1,2,3,4,5,6 and should be changed before using the safe. It is the owners' responsibility to maintain the code; Safari will try to maintain records for up to 6 months.

Step 1: Turn the handle slightly clockwise until handle stops. **Do not force!**

Step 2: Enter the six (6) digit code slowly.

Step 3: Turn handle counter-clockwise to unlock safe.

If there are three (3) beeps after entering the code the lock doesn't recognize the code. Slow down and start over.

Programming Instructions

Important: When changing the combination door must be in the *open* and *locked* position. On some safe models there is a detent release on the bottom of the door that must be pushed up to put door into locked position. You must know the current six (6) digit code to program and have 20 seconds to complete steps 1-4.

Step 1: Enter '0' six (6) times

Step 2: Enter existing six (6) digit code

Step 3: Enter new six (6) digit code

Step 4: Re-enter new six (6) digit code

If lock signals three (3) times old code is still valid

3. Lock Out (Wrong Try Penalty)

After four (4) wrong entries the lock will go into lock out for 5 minutes. Lock can also go into lock out during re-programming if it interprets an incorrect programming sequence.

Do not press any buttons or unplug the battery during the lockout period.

It will restart the 5 minute waiting period.

Maintenance

Important: All maintenance work should be performed by a qualified locksmith in your area. Cannon assumes no responsibility for the cost of maintenance or the work performed.

Low Battery Warning: The lock will repeatedly beep during unlocking indicating that the battery is low and needs to be replaced. **Only use Duracell Alkaline batteries with a 'Best if Used by Date' 5 years in the future.**

Changing the Battery: To replace battery slide the keypad up and lift off. Locate the battery on the back side of keypad and replace.

Safe Set Up

Removing Safe from Pallet

Cannon Safe recommends contacting professional movers to install your safe. By choosing to install the safe on your own you agree to hold Cannon Safe blameless of any damage, injury, or death caused by your negligence. Proceed with caution.

Use Caution. Safe is TOP heavy. While having someone(s) securely holding the safe:

- Open door, remove the lag screws from the floor area.
- Close door. If equipped with a mechanical lock turn dial back to zero and lock with key.
- With at least two (2) people, carefully slide the safe from pallet.

Placement of the Safe

Before placing your safe, verify the load bearing weight of the floors or stairs the safe will be moved over. Tile, wood, and other types of floors could be damaged by the weight of the safe. To help determine if the safe will make it through doorways, stairs, or corners use the empty safe box to see if it will fit all the way to the final location.

The safe should be securely fastened to the floor to prevent tip over or unauthorized removal.

When choosing a location consider the following:

- Install the safe near a load-bearing wall as a precaution to support the weight.
- To protect the exterior finish, consider installing the safe inside your home where there's climate control.
- Where the safe is placed will have a big impact on how it will perform during a fire. Consider lower levels (1st floor or basement) where temperatures tend to be cooler and try to stay away from potential hot spots (areas where flammable materials are stored).

Interior Set-Up

Interior is subject to change and may differ depending on size and model.

- Install top shelf, or shelves at desired height using the provided shelf clips.
- The gun rack is already installed.
- Install side shelves.
- The cover plate shelf fits directly over half the gun rack. This allows you to use the rack as a shelf.

Shelf clips can be adjusted as needed. Side shelves may be installed on the right or left. For an all-rifle interior remove the side shelves and cover plate shelf.



Loading Your Safe

Do not put anything in your safe that will put pressure against the door when it's closed.

Overloading shelves (35 + lbs.) can cause them to sag or break. Maximum weights vary by model.

Store heavy items away from the middle of the shelf and try to distribute weight evenly across shelf.

- When putting guns into your safe, make sure they rest securely into the cutouts to prevent accidental tipping when the door is closed.
- A dehumidifier or desiccant is recommended in humid environment to protect against rust and mildew. Dehumidifiers and other moisture reducing products are available from your dealer or www.cannonsafe.com.

Warranty Registration Card

Last Name First Name M.I. Address City State Zip Phone Number Email Address

About the Safari Safe:

Model Purchased:

Have you ever bought a Safari Safe before this purchase? Yes No

What features prompted you to purchase a SafariSafe?

Beside firearms, what else will you store in you Safari Safe? Jewelry Medicine

Documents Money Electronics Other

What prompted you to buy the Safari Safe? Magazine Ad Newspaper Ad

TV Ad Store Saleman In-Store Display Magazine Article

Product Quality Price Personal Recommendation

Other If Magazine, which one

Where purchased? Dealer Name Date Purchased

Type of Store: Department Discount Chain Sporting Goods Hardware

Firearms Dealer Locksmith Catalog Other

Your Sex? Male Female

Your Age? Under 18 18-24 25-35 35-44 45-54

55 +

Education? Attended College Graduated from College

Attended High School Graduated High School

Are you a law enforcement officer? Yes No

Are/Were you in the Military? Yes No Branch

Your approximate annual household income: Under 15,000 15,000-19,999 20,000-29,999

30,000-39,999 40,000-49,999 Over 50,000

Number of people in your family? Adults Children

Where do you plan to use your Safari Safe? Home Office Other

Why did you buy a Safari Safe? Price Brand Name Quality

Features Other

Would you like to be on our mailing list? Yes No

Serial # Key Code

Verry IMPORTANT

(See Key)

Submit online at www.cannonsafe.com/contact/register.html

Or

Remove and mail to:

19949 Kendall Dr San Bernardino CA 92407

Warranty

1. Cannon Security Products, LLC (the "Company") warrants to the original consumer (the "Purchaser") that this product (the "Product") will be free from defects in workmanship and materials for a period of one (1) year from the date of purchase. These warranties are not assignable or transferable to any other person.
2. Any damage to the product as a result of misuse, tampering, abuse, neglect, accident, improper installation, modification, unauthorized service, destruction, or the alteration of the serial number, or use violative of the instructions furnished by the Company will void this warranty.
3. The sole responsibility of the Company shall be limited to the repair or replacement (in its sole discretion) of any component of the Product which fails to conform to this warranty at no cost to the purchaser for a period of one (1) year from the date of original purchase.
4. Contact the Company directly to obtain service under this warranty. If it becomes necessary to send a defective product to the Company, a Return Authorization Number must first be obtained from the company.
5. Products shipped without prior Return Authorization and Return Authorization Number may not be accepted, and the Company will not be responsible for their disposition and/or cost of return to the owner.
6. The Company will not assume any responsibility for any loss or damage incurred in shipping. All return authorized products should include a copy of the original invoice in order that this warranty may be honored.
7. This warranty is not an insurance policy. The Company is not responsible for damage to or theft of the Purchaser's product or its contents.
8. The obligation of Company under this warranty is contingent upon proper use of the Product, and shall not apply to Products, or parts or components thereof, which have been put in unusual or extreme environments or any damage caused by an act of God or force of nature. Modifying or tampering with the Product, which might affect the Product's use, voids this warranty
9. Without limitation, this warranty specifically excludes any liability for defects or damages caused by, or aggravated by, human error or the use of unauthorized parts or components.
10. We recommend that the enclosed warranty card be completed in full, and returned to the Company within ten (10) days of the original date of purchase to validate this warranty.
11. Any implied warranties which the purchaser may have are limited to the duration of the warranties described above. There are no further warranties which extend or apply beyond the face hereof, and the company expressly disclaims and excludes any and all warranties of merchant ability or fitness for a particular purpose. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
12. Repair or replacement shall be the sole remedy for the purchaser under this warranty. The company shall not be liable for any direct, indirect, incidental or consequential damages, losses or expense arising from the use or misuse of the Product. Some states do not allow the exclusion or limitations of incidental or consequential damages, so the limitation may not apply to you.
13. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

